



Quick Start Guide

Multifunctional bench scale

PTS6K-MF / PTS15K-MF



Important: Place scale on solid surface, use the build-in level indicator to adjust the stands.

Power supply:

The scale is equipped with a rechargeable battery pack.

If the  symbol is displayed, the battery must be recharged.

Connect the power cable.

Switch ON-OFF: Power switch on the lower left side, marked with **OFF** ↓ **ON**

Display after system Test:  **STABLE** **0.0^g**

Unit selection:

Push  key to select weighing unit kg or lb.

Weighing without container (without TARE function):

If display not **0.0^g**, push  key.

Place parts to the center of the platform.

Wait until  **STABLE** is displayed.

The weight is displayed.

Weighing with container (with TARE function)

Place container on the platform.

Push  key. Display: Net  **STABLE** **0.0 g**

Place parts into the container.

Net weight is displayed.

Reset TARE value: Push  key.

Counting function:

(If a container is used, note „Weighing with container“)

Select reference batch: Push  key. Display: Net **C** **10 Pcs.**

For further reference batches (20, 50, 100), use  key.

For best results, select the highest possible batch.

Place selected batch on the platform, then push  key.

Display: **SAMPLE**

Place parts to be counted on the platform.

The number of pieces (Pcs) is displayed.

Back to weighing function: Push  key.

Totalizing of single quantities:

(If a container is used, note „Weighing with container“)

If **M+** is displayed, the previous totalizing must be deleted:

Push  key, then the **CE** key.

Place 1st quantity on the scale; wait until **STABL** is displayed.

Push **M+** key.

Memory space # 0001 is displayed, followed by the current weight.

Place 2nd quantity on the scale; wait until **STABL** is displayed.

Push **M+** key.

Memory space # 0002 is displayed, followed by the total weight. After 2 sec. the current weight is displayed.

Max. 9999 quantities can be totalized.

Display of the totalized weight:

Push  key.

The number of quantities and the totalized weight is displayed.

Delete the current totalized weight:

Push  key, followed by **CE** key.

Check weighing mode (without tolerance range):

The scale is preset to a selected weight.

When the selected weight is reached, an acoustic signal is generated.

Preset the weight:

Push  key. Display:  - - . - -  flashing.

Select with  key the desired digit

Display (after 1st selection):   - - . - - 

Select with  key the value of the desired digit (0 – 9).

After input of the last digit (xxxxx.0) push  key.

Display:  - - . - -  flashing.

Push  key. Display: 0.0 g

Function:

Place the material on the platform.

Once the selected weight is reached, an acoustic signal is generated. Display: **OK**

Deactivate the function:

Push  key, followed by  key.

Push **CE** key 2 times.

For further functions and system parameter setting, note the instruction manual.