

TA-EL-022 INSTALLATION

Systeme de transmission de donnees sans fil
Drahtloses Datenuebertragungs-System
Wireless Data Transfer System



Contenu du set | Inhalt des Sets | Content of the Set



Module sans fil pour l'instrument
Drahtloses Modul für das Instrument
Wireless module for the instrument



Dongle USB pour le PC
USB Dongle für den PC
USB Dongle for the PC

Configuration système | Systemanforderungen | System Requirements

- Microsoft Window 7 / 8 / 10
- TrimosDataTransfer (www.trimos.com) / Sylvac Vmux (www.sylvac.ch)
- Drivers USB Dongle (www.silabs.com/documents/login/software/BLED112-Signed-Win-Drv.zip)

Installation | Installation | Installation

Connecter le module sans fil au port série de l'instrument.

1. Drahtloses Modul zur seriellen Anschluss des Instruments verbinden.
Connect the wireless module to the serial port of the instrument.



Connecter le dongle USB au PC. Si nécessaire installer les pilotes.

2. USB-Dongle in den PC einstecken. Bei Bedarf die Treiber installieren.
Plug the USB dongle into the PC. If necessary install the drivers.



Suivre les instructions de TrimosDataTransfer.
(ou tout autre logiciel de transmission de données)

3. Follow TrimosDataTransfer instructions.
(or any other data transmission software)

Anweisungen von TrimosDataTransfer befolgen.
(oder jede andere Datenübertragungssoftware)

