

## Accessoires à batterie pour appareils avec logement pour batterie



**HSA 100** / 656355



**BGA 86** / 656443  
**BGA 300** / 656446



**MSA 160 C-B** / 656074  
**MSA 161 T** / 656075  
**MSA 200 C-BQ** / 656076  
**MSA 220 C-BQ** / 656078  
**MSA 220 TC-O** / 656080  
**MSA 300** / 656081  
**MSA 300 TC-O** / 656082



**KMA 135 R**  
656701



**HTA 66** / 656113  
**HTA 86** / 656115  
**HTA 135** / 656116



**HLA 66** / 656373  
**HLA 86** / 656375  
**HLA 135** / 656376  
**HLA 135 K** / 656377



**FSA 86 R** / 656243  
**FSA 90** / 656245  
**FSA 90 R** / 656246  
**FSA 135** / 656249  
**FSA 135 R** / 656250  
**RGA 140** / 656251



**KGA 770** / 656476



**TSA 230** / 656800



**RMA 443** / 656821  
**RMA 443 VC** / 656823  
**RMA 448 VC** / 656824  
**RMA 765 V** / 656825  
**RMA 2 RPV** / 656826

### Alimentation par batterie



**Fonctionnement avec batterie AP**  
Le logement pour batterie intégré au boîtier sert de station de contact sécurisé direct pour la batterie.



**Fonctionnement avec adaptateur AP**  
L'adaptateur est utilisé lorsqu'une batterie avec ligne de raccordement (par ex. AR 2000 L) doit être chargée ou utilisée pour un appareil avec logement pour batterie.



**AP 200** / 656525  
**AP 300 S** / 656525  
**AP 500 S** / 656525



**Adaptateur AP**  
656548



**Étui de ceinture AP avec câble de raccordement**  
656550



**AP 200** / 656525  
**AP 300 S** / 656525  
**AP 500 S** / 656525



**Système de port p. batteries AR L**  
656553



**AR 2000 L** / 656534  
**AR 3000 L** / 656534



**AL 101** / 656540



**AL 301** / 656541  
**AL 301-4** / 656543  
**AL 500** / 656542



**AL 101** / 656540



**AL 301** / 656541  
**AL 301-4** / 656543  
**AL 500** / 656542



**AL 301** / 656541  
**AL 301-4** / 656543  
**AL 500** / 656542