

swiss precision tools

LUMINESCENCE TESTING UNIT

PHOTOLUMINESCENT PIGMENT TESTING ON DIALS AND HANDS Ref.: G419000

THIS DEVICE SIMULATES A NOCTURNAL ENVIRONMENT AT YOUR WORK SPACE, AT ANY TIME OF DAY. PORTABLE AND COMPACT, IT ENABLES YOU TO TEST HANDS, DIALS AND WATCHES OF ANY DIAMETER. IT IS EQUIPPED WITH A UV SOURCE AND A HEIGHT-ADJUSTABLE X2.5 MAGNIFIER.

This simple-to-use unit is used for testing luminescent materials, such as Super-LumiNova®. The UV lamp is activated by a short press on a button situated on the front of the device.

It is equipped with a height adjustable x2.5 magnifier to obtain the right viewing sharpness. Its anti-UV filter protects the eye from the harmful effects of ultra-violet rays.

This tool is lightweight, ergonomic and easy to handle. It is made entirely from synthetic material, preventing risks of scratching in case of mishandling.

A removable clip-on insert inside the unit enables you to place your photoluminescent references as close as possible to the products tested. We are able to do tailored materials deposit.

The device is battery-powered, and rechargeable via a USB-C port.

Sta 15 X

Standards:

- Complies with CE requirements
- Standard NF EN 61010 Safety of laboratory equipment
- Standard NF EN 62368 Audio/video, information and communication technology equipment
- Harmonized standards for Electro-Magnetic Compatibility (EMC)
- Standard IEC 62471 -Photobiological safety of lamps

Technical specifications:

- Synthetic material
- X2.5 magnifier
- UV source (1.A / RANK: U-IP2-V2 / 390 nm)
- Anti-UV filter (UV 400 / 2C-1,2)

Product contents:

- Luminescence testing unit
- X2.5 magnifier with UV filter
- Clip-on insert to depose your photoluminescent materials
- Li-ion battery
- USB to USB-C line

Size:

110 mm x 120 mm x 93 mm

Weight:

160 grams

References:

G419000



Route de la Jaluse 5b, 2400 Le Locle Tel : 032 926 19 46 www.techniwatch.ch






swiss precision tools

LUMINESCENCE TESTING UNIT

Product details

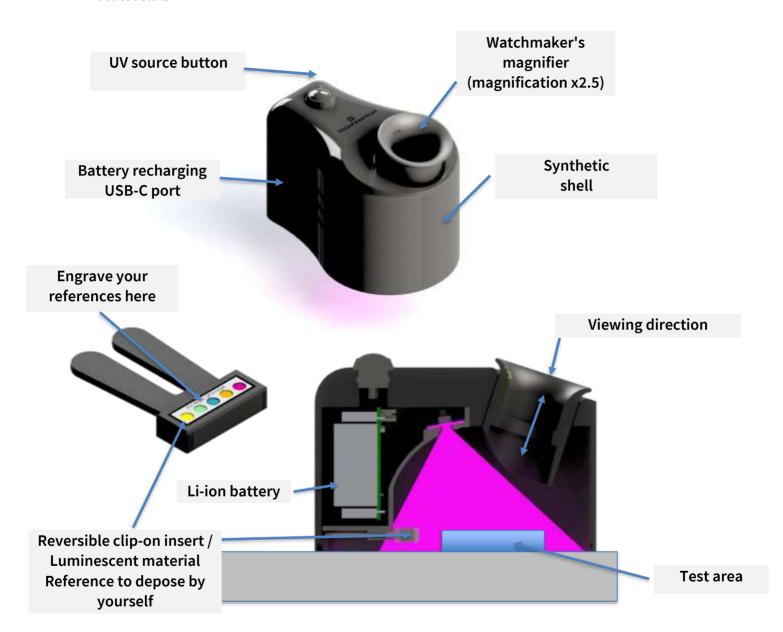





RECOMMENDATIONS:

Present the device above the piece/part
Press the button (for approx. 1 sec) to activate the luminescence.

Observe and/or compare

Cleaning (please ask)

Do not look at the UV LED on the underside of the device when active

Techniwatch SA



swiss precision tools

LUMINESCENCE TESTING UNIT

Accessories

	Products	Reference
0	Magnifier 0x	G419000-0x
	Elevator 30 mm	G419000-R
	Referential clip-on insert	G419000-P

